

ARISTA

AMW-101/AMW-102 Operational Manual

AC Power Inlet and AC Power Outlets

Plug in AC Power Cord to AMW-101/AMW-102 AC Inlet shown below. It has three integrated AC outlets to supply AC power as soon as AC Inlet is plugged into the AC power source outlet. The AC Inlet of the unit is fused with 10A fuse. Each integrated AC outlet can supply AC power for added peripherals, like Barcode Scanner, Barcode Printer, etc..



DC Power Supply Connectors

AMW-101/AMW-102 reserves 3 DC output connectors for customized configurations which have integrated peripherals. Depending on the integrated peripherals, the DC output will be configured as DC 5V, 12V or 24V output for specific peripheral. These three DC output connectors will be dummy connectors without DC output if no integrated peripherals are specified or ordered.

ARISTA



ARISTA

Accessible USB Ports

Two USB connectors which are protected by IP66 cover when it is not in use are for adding peripherals. Two more USB ports on the integrated LCD panel PC (ARP-3821BP) for keyboard and mouse if the keyboard and mouse are ordered.

Accessible Wired Network Ports

Up to two wired Network connectors are protected by IP66 cover when it is not in use. For Windows configuration, AMW-101/AMW-102 has two wired Network ports and optional WIFI connection. For ThinManager Ready configuration, AMW-101/AMW-102 can have either two wired Network ports or one wired Network port and one WIFI connection.

Optional Integrated Barcode Printer, Barcode Scanner and Charging Cradle, Keyboard and Mouse



ARISTA

Adjustable Height

The height of display can be adjusted via the button shown below, Press down the work surface to lower the height of display. Swivel the cover outward and press the button to increase the height of the display.





Power on AMW-101/AMW-102

For the configuration with ARP-3821BP, the computer and display will be turned on as soon as the AC power is applied to the AC Inlet of the unit. This configuration does not have power on/off switch. For ARP-3821BP with Windows configuration, is turned off via Windows Shutdown. For ARP-3821BP with ThinManager Ready configuration, just unplug the AC power to turn off the unit. Please refer to ARP-3821BP user's manual for the operation of ARP-3821BP.



Please email to support@goarista.com if you have any further question.